



IMPORTANT NOTICE: Robert Bosch LLC and the manufacturers whose vehicles are accessible using the CDR System urge end users to use the latest production release of the Crash Data Retrieval system software when viewing, printing or exporting any retrieved data from within the CDR program. Using the latest version of the CDR software is the best way to ensure that retrieved data has been translated using the most current information provided by the manufacturers of the vehicles supported by this product.

**CDR File Information** 

CDR File information	
User Entered VIN	
User	Mike Colon
Case Number	SMART # 474
EDR Data Imaging Date	01/24/2012
Crash Date	12/26/2011
Filename	ACM.CDRX
Saved on	Tuesday, January 24 2012 at 13:31:56
Collected with CDR version	Crash Data Retrieval Tool 4.3
Reported with CDR version	Crash Data Retrieval Tool 4.3
EDR Device Type	Airbag Control Module
Event(s) recovered	Front/Rear (1)

## Comments

No comments entered.

## **Data Limitations**

CDR Record Information:

- Due to limitations of the data recorded by the airbag ECU, such ashe resolution, data range, sampling interval, time period of theecording, and the items recorded, the information provided by this data maynot be sufficient to capture the entire crash.
- Pre-Crash data is recorded in discrete intervals. Due to different reesh rates within the vehicle's electronics, the data recorded manot be synchronous to each other.
- Airbag ECU data should be used in conjunction with other physical vidence obtained from the vehicle and the surrounding circumstares.
- If the airbags did not deploy or the pretensioners did not operateuring an event that meets a specified recording threshold, it is alled a Non-Deployment Event. Data from a Non-Deployment Event can be overwritten by a succeeding event that mets the specified recording threshold. If the airbag(s) deploy or the pretensioners are operated, it is alled a Deployment Event. Deployment Event data cannot be overwriten or deleted by the airbag ECU following that event.
- If power supply to the airbag ECU is lost during an event, all opart of the data may not be recorded.
- "Diagnostic Trouble Codes" are information about faults when a reording trigger is established. Various diagnostic trouble codes add be set and recorded due to component or system damage during an accident.
- The airbag ECU records only diagnostic information related to theirbag system. It does not record diagnostic information related o other vehicle systems.
- The TaSCAN, Global TechStream, or Intelligent Tester II devices (pany other Toyota genuine diagnostic tool) can be used to obtain the task of the Tascan, or Intelligent Tester II devices (pany other Toyota genuine diagnostic tool) can be used to obtain the task of the Tascan, or Intelligent Tester II devices (pany other Toyota genuine diagnostic tool) can be used to obtain the task of the Tascan, or Intelligent Tester II devices (pany other Toyota genuine diagnostic tool) can be used to obtain the task of information on the diagnostic trouble codes from the airbag systemas well as diagnostic information from other systems. Howeverin some cases, the diagnostic trouble codes of the airbag system recorde by the airbag ECU when the event occurred may not match the diagnostic trouble codes read out when the diagnostic tool is used.

### General Information:

- The data recording specifications of Toyota's airbag ECUs are divided into the following six categories. The specifications foll 2EDR are designed to be compatible with NHTSA's49CFR Part 563 rule.
  - 00EDR / 02EDR / 04EDR / 06EDR / 10EDR / 12EDR
- The airbag ECU records data for all or some of the following accident types: frontal crash, rear crash, side crash, and rollover cents. Depending on the installed airbag ECU, data for side crash and/orollover events may not be recorded.
- This airbag ECU records postcrash data, and depending on the airbag ECU, may record precrash data.
  - If a single event occurs independently, the data for that eventirecorded on a one-to-one basis.
  - If multiple events occur successively (within a period of approxiately 500ms), the establishment of the recording trigger for the first events defined as the "pre-crash recording trigger". Precrash data for the first event and postcrash data for each successive event is then recorded.
- The airbag ECU has two recording pages (memory maps) to store precrash data. Additionally, to store postcrash data, the airbag ECU has two recording pages for each accident type: two pages for frontaland rear crash, two pages for a side crash, and two pages for rodfver event.
- The data recorded by the airbag ECU includes correlating informatin between each previously occurring event (i.e., information that larifies the collision event sequence. This correlation information consistof the following items.
  - Time from Previous Pre-Crash TRG
  - Linked Pre-Crash Page
  - Time from Pre-Crash TRG
  - TRG Count
  - Previous Crash Type
- The point in time at which the recording trigger is established is garded as time zero for the recorded data.





- The recording trigger judgment threshold value differs depending to the collision type (i.e., frontal crash, rear crash, side crashor rollover event).
- Time series data for side crash may have24 or 25 sampling points.
- Some of the data recorded by the airbag ECU is transmitted to the irbag ECU from various vehicle control modules by the vehicle's Ontroller Area Network (CAN).
- In some cases, the airbag ECU part number printed on the ECU labelmay not match the airbag ECU part number that the CDR tool report. The part number retrieved by the CDR tool should be considered ashe official ECU part number.

#### **Data Definitions:**

- The "ON" setting for the "Freeze Signal" indicates a state in white the non-volatile memory can not be overwritten or deleted by the airbag EC. After "Freeze Signal" has been turned ON, subsequent events will ot be recorded.
- "Recording Status" indicates a state in which all recorded event at a has been written into the nonvolatile memory, or a state in which this process was interrupted and not fully written into the norvolatile memory. If "Recording Status" is "Incomplete", recorded vent data may not be valid.
- "Time to Deployment Command" indicates the time between recordingrigger establishment and the determination of airbag deployment. This value may differ from the actual time it takes for the airbag to filly deploy.
- Even if an airbag/pretensioner did not deploy due to the "front pasenger airbag disable switch and/or "RSCA Disable Switch" in the N position or other disabling criteria are met, the "Time to deployment commad" data element for that airbag/pretensioner may still be recorde.
- "Engine RPM" indicates the number of engine revolutions, not the umber of motor revolutions. The recorded value has an upper limit 5,200 rpm. Resolution is 400 rpm and the value is rounded down and recorded. For example, if the actual engine speed is 799 rpm, the recorded value will be 400 rpm.
- The upper limit for the recorded "Vehicle Speed" value is 22 km/h (75.8mph). Resolution is 2km/h (1.2mph) and the value is rounded down and recorded. The accuracy of the "Vehicle Speed" value can be affected by various factors. These include, but not limited, to the ollowing.
  - Significant changes in the tire's rolling radius
  - Wheel lock and wheel slip
- "Brake Switch" indicates the open/closed state of the brake switchcircuit.
- "Accelerator Rate" has two recording specifications. Both the reorded value increases as the driver depresses the accelerator.
  - Percentage of accelerator pedal depressed (recorded as0-100(%)).
  - Output voltage of accelerator pedal module (recorded as0-5(V)).
- The "Drive" setting for the "Shift Position" value indicates the sift position state is other than "R,"(Reverse), "N" (Neutral), o'P" (Park).
- Depending on the type of occupant sensor installed in the vehiclene of the following three recording formats for "Occupancy State, Passenger" will be utilized.
  - Occupied / Not Occupied
  - Adult / Child / Not Occupied
  - AM50 / AF05 / Child / Not Occupied
- Resolution of the "Airbag Warning Lamp ON Time Since DTC was Set'ls 15 minutes, and the value is rounded down and recorded.
- "Longitudinal DeltaV" indicates the change in forward speed after establishment of the recording trigger. This does not refer to vehicle speed, and it does not include the change in speed during the period frorthe start of the actual collision to establishment of the recordig trigger. If frontal crash, "Longitudinal DeltaV" is negative.
- "Roll Angle peak" may not always match the peak value within the Roll Angle sampling points due to differences in data calculatiomethod.
- For "Lateral Delta-V, B-Pillar Sensor", "Lateral Delta-V, C-Pillar Sensor" and "Lateral Delta-V, Slide Door Sensor", the direction from the outside to the inside of the vehicle is shown as a positive value.
- For "Lateral Delta-V, Airbag ECU Sensor", while sitting in the driver's seat the direction from left to right from the viewpoint of the driver facing in the forward direction is shown as a positive value.
- For "Lateral Delta-V", the sensor location (Bpillar, front door, C-pillar, and slide door) shows the outline of a typical sensor potson. Sensory location can be confirmed using the repair manual.
- For "Lateral Acceleration", the direction from right to left from the viewpoint of the driver facing in the forward direction of the while sitting in the driver's seat is shown as a positive value.
- "Time from Previous Pre-Crash TRG" indicates the time between the establishment of an evens pre-crash recording trigger to the establishment of a more recent event's precrash recording trigger. The upper limit for the recorded values 16,381 milliseconds. In the event of establishment of the first precrash recording trigger after the ignition is switched ON, the uper limit value(max value) is recorded.
- "TRG Count" indicates a calculated value of the number of times reording triggers have been established for all crash types. The equence in which each event occurred can be verified from the "TRG Count". The smaller the "TRG Count" value, the older the data. The upper in the transfer of the count occurred can be verified from the "TRG Count". the recorded value is65,533 times. When more than one event reaches the upper limit, the actal "TRG Count" may be greater than what is displayed for that event.
- "Linked Pre-Crash Page" is used to link 'paged" precrash data with 'paged" postcrash data. When old pre-crash data is overwritten by new pre-crash data, the "Linked PreCrash Page" value may record a page number that is not actually niked.
- Resolution of the "Time from PreCrash to TRG" is 100 [ms], and the value is rounded down and recorded.

05006 ToyotaDENSO\_r010





System Status at Time of Retrieval 89170-33570 ECU Part Number 06EDR ECU Generation Complete Recording Status, All Pages Freeze Signal OFF None Freeze Signal Factor No Diagnostic Trouble Codes Exist 16381 or greater Time from Previous Pre Crash TRG (msec) 0 Latest Pre-Crash Page No Contains Unlinked Pre-Crash Data

Event Record St	ummary	at Retrieval			1
Franks Deconded	TRG Count	Crash Type	Time (msec)	Pre-Crash & DTC Data Recording Status	Event & Crash Pulse Data Recording Status
Events Recorded	Count	The state of the s	Time (meet)	1-1- (D 0)	Complete (Front/Rear Page 0)
Most Recent Event	1	Front/Rear Crash	0	Complete (Page 0)	Complete (Frontifical Fage o)






System Status at Event (Most Recent Event, TRG 1)

System Status at Event (Most Recent Event, 1RG 1)	Complete
Recording Status, Front/Rear Crash Info.	Front/Rear Crash
Crash Type	1
TRG Count (times)	Na Event
Previous Crash Type	No Event
Time from Pre-Crash TRG (msec)	0
Linked Pre-Crash Page	0
Time to Deployment Command, Front Airbag, Driver (msec)	Not Commanded
Time to Deployment Command, Front Airbag, Passenger (msec)	Not Commanded
Event Severity Status, Driver	N/A
Event Severity Status, Passenger	N/A
Time to Deployment Command, Pretensioner (msec)	Not Commanded





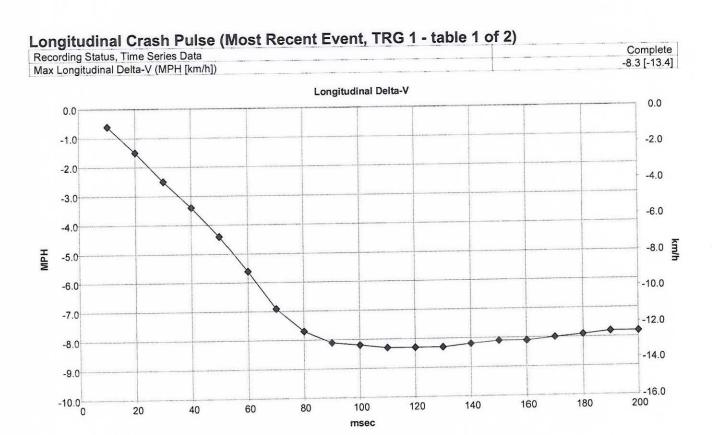

Page 5 of 9





# Longitudinal Crash Pulse (Most Recent Event, TRG 1 - table 2 of 2)

Time (msec)	Longitudinal Delta-V (MPH [km/h])
10	-0.6 [-1.0]
20	-1.5 [-2.4]
30	-2.5 [-4.0]
40	-3.4 [-5.5]
50	-4.4 [-7.1]
60	-5.6 [-9.0]
70	-6.9 [-11.1]
80	-7.7 [-12.4]
90	-8.1 [-13.0]
100	-8.2 [-13.2]
110	-8.3 [-13.4]
120	-8.3 [-13.4]
130	-8.3 [-13.4]
140	-8.2 [-13.2]
150	-8.1 [-13.0]
160	-8.1 [-13.0]
170	-8.0 [-12.9]
180	-7.9 [-12.7]
190	-7.8 [-12.6]
200	-7.8 [-12.6]





DTCs Present at Time of Event (Most Recent Event, TRG 1)	
	Complete
Recording Status, Diagnostic	0
Ignition Cycle Since DTC was Set (times)	
Airbag Warning Lamp ON Time Since DTC was Set (min)	None
Diagnostic Trouble Codes	None

Pre-Crash Data, 1 Sample (Most Recent Event, TRG 1)	Complete
Recording Status, Pre-Crash/Occupant	400
Time from Pre-Crash to TRG (msec)	Buckled
Buckle Switch, Left Seat	Buckled
Buckle Switch, Right Seat	AM50
Occupancy Status, Passenger	Rearward
Seat Position, Driver	Drive
Shift Position	

conds (Most	Recent E	vent, TRG	1)		
	-3.4	-2.4	-1.4	-0.4	0 (TRG)
			3.7 [6]	5 [8]	8.7 [14]
			OFF	OFF	ON
	*************		0.78	1.37	0.78
		400	400	1,600	1,200
	-4.4 3.7 [6] OFF 0.94 400	-4.4 -3.4 3.7 [6] 3.7 [6] OFF OFF 0.94 0.98	-4.4 -3.4 -2.4 3.7 [6] 3.7 [6] 3.7 [6] OFF OFF OFF 0.94 0.98 0.78	-4.4 -3.4 -2.4 -1.4 3.7 [6] 3.7 [6] 3.7 [6] 3.7 [6] OFF OFF OFF OFF 0.94 0.98 0.78 0.78	3.7 [6] 3.7 [6] 3.7 [6] 5 [8]  OFF OFF OFF OFF OFF  0.94 0.98 0.78 0.78 1.37





## **Hexadecimal Data**

Data that the vehicle manufacturer has specified for data retrieval is shown in the hexadecimal data section of the CDR report. The hexadecimal data section of the CDR report may contain data that is not translated by the CDR program. The control module contains additional data that is not retrievable by the CDR system.

PIDs	PID 00 01	Data BC 60																	10/2/1			2.0	20	45
	03 04 05 06	33 33 35 30 02 02 01	30	30	30 45	30 41	30 30	30 30	45 30	43 45	30 41	30	30	45	43	30	30	30	45	35	30	30	30	45
	0A 0B 20 21 40	01 00 80 00 00 31 00 00	00	01																				
	60 80 A0 C0 E0	00 00 00 00 00 00 00 00 C0 10 00 00	00	01 01 01																				
	E2 00	00 5B 00	19	11	00																			
EEPROM	Address  0 10 20 30 40 50 60 70 80 90 A0 B0 C0 D0 10 120 130 140 150 160 170 180 190 1A0 1B0 1C0 1D0 1E0 1F0	Data  00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 31 188 00 00 00 00 00 00 00 00 00 00 00 00 0	00 00 3F 00 01 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 23 00 05 55 00 00 00 00 00 00 00 00 00 00	00 00 00 11 00 00 00 00 00 00 00 00 00 0	00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 14 00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00 00	00 00 00 00 00 00 00 00 00 00 00 00 00	000000000000000000000000000000000000000								





**Disclaimer of Liability** 

The users of the CDR product and reviewers of the CDR reports and exported data shall ensure that data and information supplied is applicable to the vehicle, vehicle's system(s) and the vehicle ECU. Robert Bosch LLC and all its directors, officers, employees and members shall not be liable for damages arising out of or related to incorrect, incomplete or misinterpreted software and/or data. Robert Bosch LLC expressly excludes all liability for incidental, consequential, special or punitive damages arising from or related to the CDR data, CDR software or use thereof.